

PLATINUM II[®]

OWNER'S MANUAL

SECTION 7

MISCELLANEOUS

Section 7 - Miscellaneous:

HD Television Antenna w/WiFi Booster	7-2
Automatic Entry Step	7-3
MCD American Duo Roller Shades	7-4
Carefree of Colorado Awning	7-5
Power Sofa Twin	7-6
Illumagrip Entry Handle	7-7
Hardwood Cabinet Doors	7-8
Hydraulic Room Extension	7-9
Dometic Slide Topper	7-10
Exterior Body Care	7-11

HIGH DEFINITION TELEVISION


ANTENNA W/ WIFI BOOSTER

An external antenna is mounted on the roof of your motorhome. This antenna will receive and supply HD signals over the air to your television.



Push button & light on right is for WiFi booster.

Push button & light on left is for power.

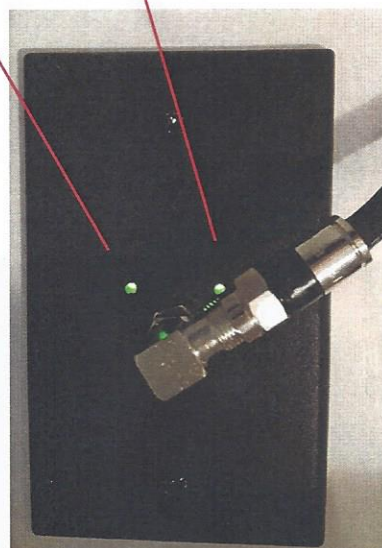

The Winegard Connect 2.0+ is a combination High Definition Television Antenna and WiFi Booster.

The new Connect 2.0 is an integrated system that works together for faster speeds and increased range from WiFi sources. Keep mobile devices, media players, and computers connected to WiFi with a reliable connection and expanded coverage. The Connect 4G2 links to nationwide 4G LTE for reliable, uninterrupted, in-motion and stationary coverage while traveling and offers the capability to swap SIM cards to add to new or existing data plans from other carriers!



See your Owner's Manual for the SIM password or call 1-800-320-9992 for support.

AUTOMATIC ENTRY STEP

Kwikkee Entry Steps will automatically extend and retract when you open the main entrance door to your motorhome. If you would like the step to stay in the "open" position when you are parked, flip the "override" switch located on the main switch panel just inside your motorhome door.

Kwikkee

Magnetic Switch

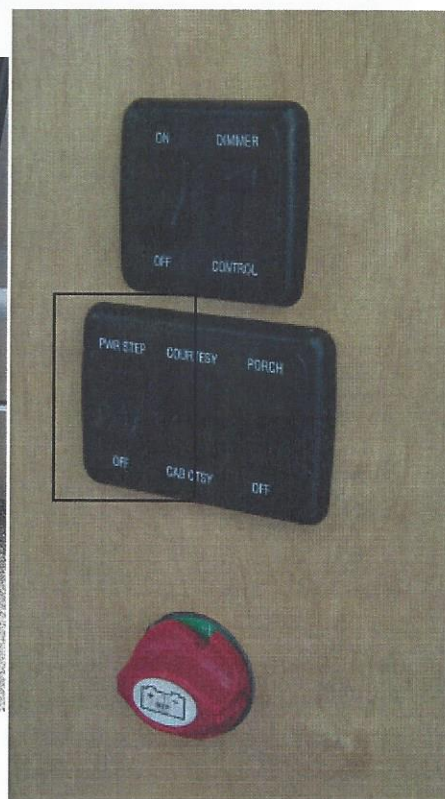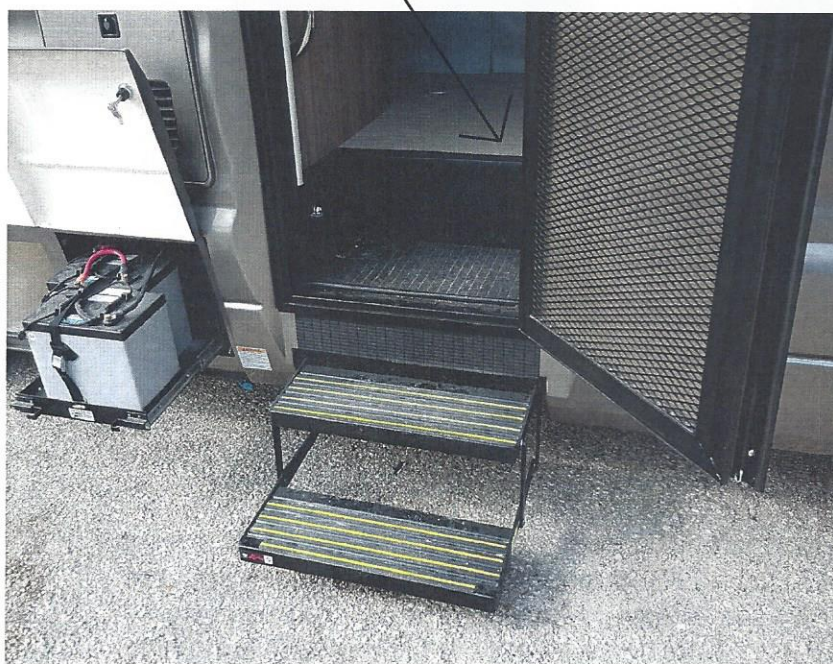

MCD AMERICAN DUO ROLLER SHADES

Your coach is equipped with MCD American Duo Roller Shades. This system allows you to use the Day Shade or the Night Time Privacy Shade. Refer to the MCD Innovations Owner's manual for adjusting, care and warranty instructions.



3303 N. McDonald St.
McKinney, TX 75071
972.548.1850
800.804.1757
www.mcdinnovations.com

CAREFREE OF COLORADO

AWNING



Your Coach House Platinum has been equipped with the Dometic 9500 series legless motorized awning. Electrical power allows the unit to automatically retract using power from the "house" batteries in the event of unforeseen inclement weather.

NOTE: Clean your awning with mild soap and water only.



CAUTION

Make sure your Battery Cutoff Switch is in the ON position any time the Electric Awning is deployed'
Damage to the Awning or Motorhome may occur if power is not available in the event of inclement weather.




NOTICE

Your Dometic awning is equipped with an automatic response system. This system provides protection against adverse elements. However, no auto retract system is a guarantee against severe or destructive weather. The effects of wind and rain on an awning are unpredictable and may cause severe damage to the awning and/or vehicle. If wind or extended periods of rain are expected, roll up the awning.

ILLUMAGRIP ENTRY HANDLE

Entry Handles installed by Coach House Motorhomes are illuminated by L.E.D. bulbs which are connected to the outside lighting circuits. These handles will light up when the porch/step light circuit is turned on.

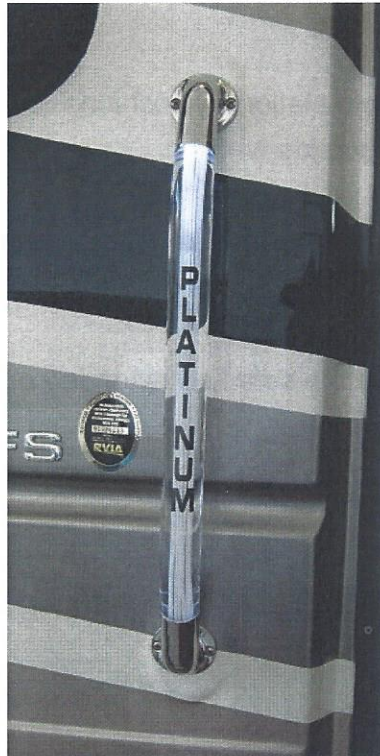

EXTERIOR BODY CARE

Premium Paint Care:

Your Coach House Platinum has been painted with base coat and clear coat premium products offered by BASF. We recommend that you wash the finish with mild soap and water.

Wax Finish:

The finish may be waxed with an automotive wax that has been labeled as "safe for clear coat".



The Chemical Company

TAKING CARE OF YOUR RV FINISH

Following these procedures can provide a long-lasting, high-gloss finish to your RV. These same procedures can also be applied to your everyday automobile, producing the same long-lasting results.

The clear coat used on all painted Coach House RV's is similar to the technology used by automotive manufacturers. The end result is a Master-piece finish which is the highest quality in the industry. The same care needs to be performed and maintained on the RV exterior surface as on an automobile finish.

Make sure the RV's surface temperature is under 90 degrees F, and is not in direct sunlight. Rinse the entire coach to remove all loose dirt and grime.

Never hold a pressure washer close to the surface. Use a fan type spray nozzle, making sure that the water coming out of the gun has a fan and not a single straight stream.

Most automotive stores offer mild car wash shampoos that are safe for clear coat finishes.

We recommend using baby shampoo as it will not leave a film on the painted finish. Adding 1/2 of a cup of food grade vinegar to the water will boost the cleaning ability of any cleaner and also soften the water. This also helps to minimize water spots.

Do not use dish soap, detergents with degreasing agents, or industrial cleaners as they can cause damage to the finish.

Use a 100% cotton or Lambs-wool pad or wash mitt for washing the painted surface of the RV.

Use a different mitt for washing the wheels and undercarriage.

Change water in the wash bucket often or place a "dirt guard" in the bottom of the bucket to keep the cleaning pad or wash mitt free of dirt and debris.

ABSOLUTELY NO BRUSHES SHOULD BE USED ON THE PAINTED SURFACE. USE OF THESE ON YOUR RV'S PAINTED SURFACE WILL CAUSE DAMAGE TO THE FINISH, AS IT WOULD AN AUTOMOBILE FINISH. COACH HOUSE DOES NOT SUPPORT USING ANY STYLE, TYPE, MATERIAL OF BRUSH EVEN THOUGH IT MAY BE MARKED AS "RV SAFE" OR "APPROVED."

Damage caused by inappropriate or unapplied maintenance is not covered under warranty as expressed in the Coach House Expressed Limited Written Warranty.

DRYING YOUR RV

Drying the RV is just as important as washing it. Today's tap water and well water contains many chemicals that could leave water stains on the finish. After washing, dry the RV with a squeegee or a clean 100% leather chamois. You can also use fresh Microfiber towels for drying. Please use caution as these towels are made partially with polyester (which is plastic) which can break down over time from extended use and washing, eventually causing damage to the clear coat finish.

WAXES AND POLISHES

Over 90% of all passenger vehicles are clearcoated. The finish on your RV is a state of the art Acrylic Urethane Basecoat / Clearcoat. This means that what you wax and polish is a clear urethane coating designed to protect the basecoat, the pigmented coating that provides color. As its main function of protecting the basecoat, clearcoats need to be maintained, especially in harsh environments. Clearcoats do not fade themselves, but appear to fade or lose gloss as the surface becomes contaminated by the environment. If this contamination is not removed frequently, results will be a dull or low-gloss finish. Occasional washing alone will not adequately remove some forms of contamination and will require polishing.

Polishes and waxes primarily serve the following purposes:

- 1) To remove minor surface imperfections caused by water spots and acid rain.
- 2) To remove minor scratches by filling them and leveling the surface.
- 3) To seal the pores of the finish creating an easier-to-clean surface.
- 4) To beautify the paint finish appearance with more depth and high gloss.
- 5) To protect the paint finish from the elements.

Do not use products that contain harsh abrasives such as rubbing compounds. These products should be used by an experienced technician with proper training and equipment. Most polishes and waxes are designed to clean and polish in one application, whether by hand or machine.

A machine applied polish will last longer than one applied by hand because the high RPM of the buffing wheel creates heat, resulting in a deeper film with higher gloss. However, a hand-applied polish or wax will offer outstanding performance and protect the RV's finish. Use only a sponge buffing pad to prevent "burn through".

When applying polish or wax, do so in a shaded area making sure the RV surface is at the specified temperature according to the polish manufacturer's recommendations. Due to the variations of polishes and waxes, incorporate the following suggestions into the polishing technique:

- 1) Condition the polishing pad by rubbing a slight amount of polish on it.
- 2) Use only the amount of polish specified in the label directions.
- 3) Work a small area at a time.
- 4) Rinse off and remove dried polish from crevices, trim, and moldings.

For optimum results, refrain from waxing or polishing for 60 days from date of manufacture.