ANKER

Anker Soundsync User Manual

Model No.: A3341 51005000915 V01 Gebrauchsanweisung | Manuel de l'utilisateur | Manuale d'uso Manual del propietario | Manual do proprietário | 取扱説明書 用户手册 | 사용자 메뉴얼 Руководство пользователя | 과상



Safety Instructions

- · Do not drop, knock or shake the device.
- Do not disassemble. Do not attempt to open the device.
- · Keep the device dry, away from all types of liquids or moisture that will corrode electronic circuits. If the device gets wet, make it dry immediately.
- · Avoid extreme temperatures.
- Do not use the device outdoors during thunderstorms.
- · Use original or certified cables.
- Do not use any corrosive cleaner/oil to clean.



The device should be charged at least once a month to prevent battery from excessive self-discharge phenomenon.

What's Included









 


 




At a Glance







- 3.5mm AUX input
- SPDIF Transmitter input port
- SPDIF Receiver output port
- Micro USB charging port
- Power switch / Multi-function button
- Battery indicator / Status indicator
- Transmitter mode(TX) switch / Receiver mode(RX) switch

 


 
please charge the Bluetooth Transceiver before first use.

I Using Your Soundsync

1.Turn on / off

RX mode






ON	Press and hold for 2 seconds
OFF	Press and hold for 2 seconds

2. Button controls

Bluetooth transmitter / receiver mode

-)	Flashing blue	Power on
•	Steady blue(RX mode)	Connected to a device Note: the status indicator flashes differently according to the operation status.

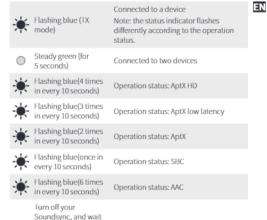


Clear present pairing list


for 3 seconds. Slide

switch to TX or RX then restart your Soundsync.

 n:



 Enter Bluetooth receiver mode / Disconnect Bluetooth receiver mode Note: under Bluetooth receiver mode, the LED flashes red and blue alternately.



Enter Bluetooth transmitter mode / Disconnect Bluetooth transmitter mode Note: under Bluetooth transmitter mode, the LED flashes blue.

3. Music



How to connect your Soundsync to two mobile phones at same time:





 
This function is only available in RX mode.

- 1. Connect the first mobile phone to your Soundsync, turn off the Bluetooth of the first mobile phone once connected.
- 2. Press multi-function button twice to enter Bluetooth pairing mode.
- 3. Connect the second mobile phone to your Soundsync. Once the second mobile phone is connected to Soundsync, turn on the Bluetooth of the first mobile phone, then find Soundsync in your pairing list. Click it for connection, make sure the connection is successful.



Soundsync can only play the music on one mobile phone at a time.

How to connect your Soundsync to two Bluetooth headphones / speakers at same time:





You can play music on both headphones / speakers at same time. This function is only available in TX mode.

- Connect your Soundsync to the first Bluetooth headphone / speaker.
 Press the multi-function button on your Soundsync and hold for 2 seconds to enter Bluetooth pairing mode (or double click multi-function button to activate Bluetooth pairing mode).
- Place your Soundsync next to the first headphone / speaker and wait 30 secs for connection. Once Soundsync is successfully connected to the first headphone / speaker, turn off both your Soundsync and the first headphone / speaker.
- Turn on the Bluetooth of the second headphone / speaker. Press the multi-function button on your Soundsync and hold for 2 seconds to enter Bluetooth pairing mode (or double click multi-function button to activate Bluetooth pairing mode).

- 4. Place your Soundsync next to the second headphone / speaker and wait 30 secs for connection. Once Soundsync is successfully connected to the second headphone / speaker, turn off your Soundsync.
- 5. Now turn the first headphone / speaker on, wait for 10 to 20 secs, then turn on your Soundsync, wait for another 30 secs. Both headphones / speakers will have sound if the connection is successful. For unsuccessful connection, restart your Soundsync to connect the devices or repeat above procedures.



Play / pause Note: not available in Transmitter mode(TX).

AUX mode

 





SPDIF mode is the default mode, but Soundsync will automatically switch to AUX mode when 3.5mm audio cable is plugged in.

ΕN

SPDIF mode



Charge your Soundsync

 



make sure it is fully charged before first use.

Disconnect your Soundsync from charger when fully charged. Do not charge your Soundsync for extended periods. When not in use, store your Soundsync in a cool place.

Specifications



Specifications are subject to change without notice.

DC input: 5 V

Battery type: 350mAH Rechargeable Lithium Battery Standby time: Approximately 120 hours(RX mode)

AUX play time (Receiver mode): Approximately 17 hours

AUX play time (Transmitter mode): Approximately 25 hours

SPDIF play time (Receiver mode): Approximately 13 hours

SPDIF play time (Transmitter mode): Approximately 20 hours

Charging time: 2 hours

Bluetooth version: V5.0